


# PET Hair Dryer

CM-A01、CM-B01

## Operation Instruction

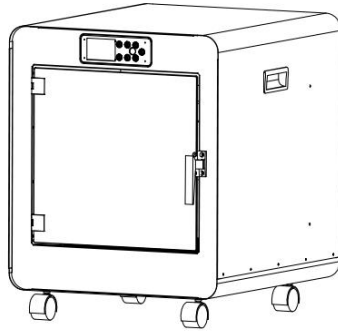

**Please read the instructions carefully before use**  
**The appearance of this product is subject to the physical object**  
**Please keep the instruction manual well**

**Execution standard: GB 4706.1-2005、GB 4706.15-2008、GB 4343.1-2008、GB 17625.1-2012**

### **Notice before Use**

Warning: in order to avoid damage caused by misuse, please read the manual carefully before using this product and strictly follow the purpose stated in the manual to use this product. Important contents are recorded in this "Safety Precautions" to enable you to use the product safely and correctly and prevent personal injury or property loss to you or others. After reading, keep it in a safe place so that all users of the product can refer to it at any time.

1. This product is a heating appliance. Please use the socket of 10A or above separately before use. Make sure the socket is properly grounded.
2. Pet hair dryer belongs to high-power electrical appliances, it is strictly prohibited to use flexible wire mobile socket.

### **Do not share a socket with other appliances.**

3. The appliance cannot run in the way of external timer or independent remote control system.
4. If the power supply cord is damaged, in order to avoid danger, it must be replaced by the manufacturer, maintenance department or professional staff in similar departments.
5. Do not pull, press the line or let it hang down along the tip or sharp edge. At the same time, keep away from heat and wet sources; Do not insert metal and other foreign matters into the gap between the cooling hole, otherwise would cause damage or electric shock hazard.
6. If it is found that the power cord or plug is damaged or the pet hair dryer is faulty, please stop using the product to avoid danger. At the same time, please send the product to the special service department, repair or replacement by a professional in the manufacturer's maintenance department or similar department.

7. he power cord. Please unplug the power cord head before moving the pet hair dryer.  
Do not immerse the power cord, plug and pet hair dryer in water or other liquids, to prevent the risk of electrocution.
  8. It is strictly prohibited to place any items on the top of the pet hair dryer when it is working  
Do not cover or cover the heat sink of the pet hair dryer to avoid fire.
  9. It is strictly forbidden to put inflammable materials such as paper or plastic in the pet hair blow-dry box or storing other items inside the box, which may cause a fire.
  
  10. It is strictly forbidden to place the sealed container in the pet hair dryer for heating, which may cause explosion.
  11. It is strictly prohibited to place the pet hair dryer near combustible or heat source, and it should be injected to stay away from curtains, cupboards and similar items to avoid a fire.
  12. Pet hair dryer should be placed in a dry environment, and can not use this product outdoors.
  13. Place the pet hair blow-dryer on an insulated surface and keep a distance of at least 15cm around the pet hair blow-dryer. Note: There are safety barrier parts on the back of the pet hair dryer. Keep a safe distance to prevent the pet hair dryer from contacting the wall and other objects.
  14. When using this product, it is strictly forbidden for children and persons with imperfect limbs, sensory or mental disorders or lack of relevant experience and knowledge to operate alone. If there are children around, use this product with extra care. Do not keep this product out of reach of children.
  15. Do not damage, excessively bend, stretch or twist the power line. Do not put it on the power line, and do not weight or clamp the power cord.
  
  16. when the pet hair dryer is used or not used for a long time, the plug should be pulled out from the socket, so as to avoid the danger of electric shock or leakage due to insulation aging.
  17. Accessories provided by the manufacturer should be used correctly, and accessories not provided by the manufacturer should not be used.
- Avoid fire or injury caused by human operation.
18. Before cleaning, moving or repairing the pet hair dryer, it should be shut down and unplug the power cord. It should be carried out after cooling in the box.
  19. When finishing use the pet hair dry machine, remove the pet out of the box in time. At the same time, in order to avoid residual heat in the box, please be sure to turn off the machine by pressing the on key first, in order to prolong the service life of the product.
  20. The product should be separated from other products at a distance of more than 30cm during use.
  21. This product is only suitable for family use, do not use this product for other purposes.

## **Introduction of pet hair dryer**


### **Main features**

1. Microcomputer control, more accurate temperature, to meet the needs of different seasons of drying at the same time .
2. Intelligent blow-drying menu makes blow-drying easier.
- 3, unique 3 times strengthen temperature control, plus leakage protection, making more safe using.
- 4, Built-in disinfection function, make disinfection, sterilization for pets.
- 5, Built-in lighting, so that pets in the machine more secure.
- 6, Hot air circulation structure, reach all-round three-dimensional blow dry.
- 7, 20-45°C wide area temperature regulation, not only can blow dry pet hair, but also can dry pet clothes and summer to cool pets.
- 8, Hidden heating, simple and generous cavity space, make cleaning more convenient.
- 9, The product is energy saving, low power consumption; Easy and quick blow-dry pet hair.

10, The temperature does not exceed 50°C. Temperature can be set, according to the length of pet hair set different temperature for dry.

11. Two-speed wind speed setting makes drying process more comfortable.

## 2、 Control panel

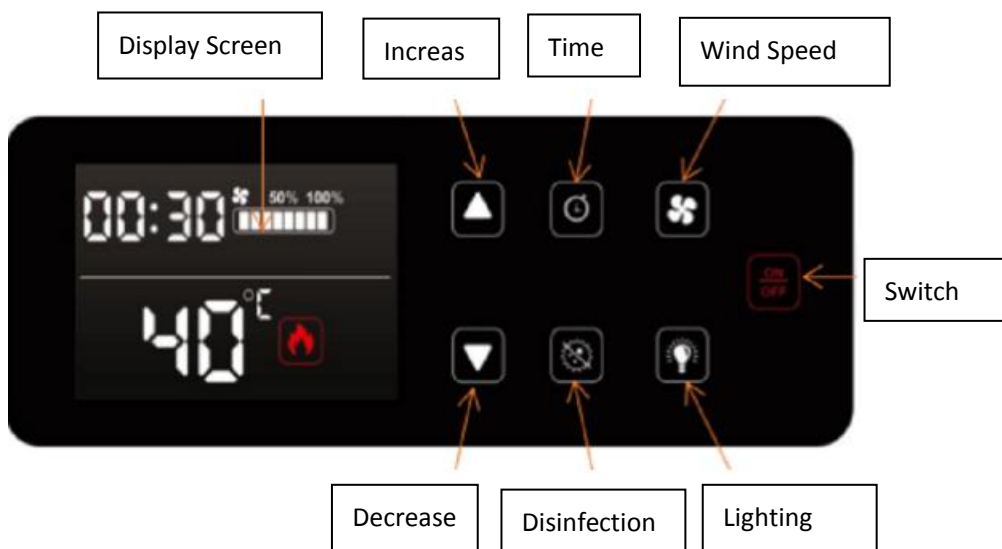

### Product working principle

Pet hair dryer is equipped with electric heater, fan, temperature control and ultraviolet lamp.

The hot air is blown out by heating element and fan, and the air forms a thermal circulation to achieve the effect of low-temperature drying. The set temperature and time can be adjusted by controller.

### Product technical parameters

Model	Rated voltage	Rated frequency	Rated power
CM-A01	AC220V	50Hz	1500W
CM-B01	AC220V	50Hz	1300W

### Product working principle and method

#### 1、 Operation steps

The pet hair dryer should placed on the flat ground, plug in the power supply, and the switch indicator light on the control panel begins to blink. At this time, press the "switch" button on the touch pad, and the machine starts to work. Directly press the "▲" or "▼" button to set the temperature, and then press the "time" button. Press to increase the "▲" or reduce the "▼" button setting time, (set the temperature according to the "temperature setting reference table" select the appropriate temperature). In winter or when the temperature is low, it is recommended to preheat the pet for two minutes and then put it into the box when the temperature reaches a comfortable state

#### 2、 Disinfection

The disinfection function can be enabled only after the pet leaves in the box. Do not enable the disinfection function when the pet is in the box. Otherwise, the pet will be harmed. Press the "disinfection" button, if there is no operation, the disinfection lamp will stop automatically one minute later.

#### 3、 Lighting

Press the "Lighting" button to turn on the light in the chassis, and then press the "Lighting" button to turn off the light.

#### 4、 Wind Speed

Press the wind speed adjustment button, the wind speed area of the display screen flashes, then press the wind speed button again, you can adjust the wind speed, the wind speed can be 50% or 100%.

#### Reference table for temperature setting:

20°C Cool your pet at 20°C in summer	
45°C Pet clothes drying at 45°C	
The ambient temperature is between 30°C and 40°C	The machine is set at 20°C-30°C
The ambient temperature is between 20°C and 30°C	The machine is set at 25°C-35°C
The ambient temperature is between 8°C and 15°C	The machine is set at 35°C-45°C

#### Safety Warning and Precautions

1. It is strictly forbidden to place the pet that has just taken a bath on the machine of the pet hair blow dryer, which will cause electricity leakage and damage after the machine is flooded, and the resulting consequences will be responsible for by the individual.
2. The disinfection function of the pet hair dryer will be automatically closed after 1 minute.
- 3, When there are people with mobility difficulties, children or animals beside the machine without the care of normal age people, should avoid using this product, so as not to cause electricity leakage or other accidents.
4. The product is only for family use. Our company is not responsible for any commercial use, improper use or failure to comply with the use of this manual, and it is also not included in the company's warranty.
- 5, After opening the package, please immediately put the plastic bag away, so as to avoid children playing and causing the danger of suffocation.
6. All the packaging materials must be removed before use, otherwise the product may cause fire and burn during work.
- 7, Ensure that the power line will not be in contact with sharp object edges, burrs and high temperature items on the surface, to prevent leakage, resulting in electric shock or fire.
8. Before connecting the power supply, please check whether the voltage marked by the product is consistent with the voltage of the power supply to avoid damage to components or fire.
- 9, Must use IOA alone or above with grounding socket, and plug should be thoroughly inserted into the socket, in order to prevent poor contact and lead to overheating components burned out, resulting in short circuit or fire hazards.
10. Do not operate this product on carpet, towel, plastic, paper and other inflammable objects to prevent fire.
- 11, Do not put this product on the unstable, wet, high temperature, smooth, heat resistant surface to use, so as to avoid electric shock, fire, slide and other accidents and property losses.
- 12, Please do not use this product in the environment of gas leakage and electric leakage, otherwise it may cause fire and electric shock.
13. Do not use this product under or near combustible materials such as curtains and closets to prevent fire.
14. Do not use this product unattended.
15. Please make sure the parts are dry before use.
16. When the product is used, enough space should be left around and at least 10 cm should be kept with the surrounding objects.  
In order to ensure that the product can fully heat to avoid high temperature affect the product performance.
17. In order to prevent electric shock or fire, please ensure electricity source is disconnected, when not using, moving or cleaning products.

18. Do not use accessories that are not attached to the product order to avoid accidental injury.
19. In order to avoid leakage accidents, it is strictly forbidden to plug the power plug with wet hands or clean the socket with wet cloth.
20. Because the machine is a hot air circulation structure, so the hair in the box must be cleaned up after each use, in order to avoid pet hair inhalation into the machine.

**In particular, the following acts are prohibited:**

1. When the pet hair blow-drying machine, power cord and power plug are obviously damaged, the pet hair blow-drying machine shall not be used.
2. Can't troubleshoot and change the structure of the pet hair blow-drying machine. When the power cord is damaged, it is not allowed to be replaced by yourself or by non-professionals.
- 3, Do not use chemical agents, water cleaning pet hair dryer.
4. When the power is switched on, it is forbidden to move the pet hair dryer.
5. In order to prevent the danger of electric shock, the pet hair dryer shall not be immersed in water.
6. When the pet hair dryer is working, flammable and explosive items shall not be put into it.

**Common faults and troubleshooting methods**

The fault phenomenon	Possible reasons	Processing method
Indicator light off	The power socket is not energized or in bad contact	Check and maintain power supply equipment
	The supply voltage does not match the rated voltage of the product	
	The power cable plug is not tightly inserted	
Don't blow hot air	The temperature is set too low	Reasonable temperature setting (temperature setting value must be higher than the ambient temperature before heating)
	Thermostat action	Turn off the machine until it cools and then turn it on or contact our company's maintenance point or dealer
The disinfection lamp doesn't work	Disinfection lamp will automatically turn off after 1 minute on	Press the sterilized light
	Did not press the button	

	again after the disinfection lamp went off automatically	button again
	Disinfection lamp not tightened or in poor contact	Please contact our company's maintenance point or dealer
	Damaged disinfection lamp	
The light doesn't work	Light not tightened or in poor contact	Please contact our company's maintenance point or dealer
	Lamp damage	
"The fault code "E1" is displayed on the screen	The temperature sensor is not plugged in properly	Please contact our company's maintenance point or dealer
	The temperature sensor is faulty	
The display shows the fault code "E2"	The temperature sensor is short-circuited	Please contact our company's maintenance point or dealer

### Product cleaning, maintenance and maintenance

1. Before cleaning, the power plug must be unplugged and cooled.
2. After the work is finished, dry with soft cotton cloth, forbid the use of corrosive detergent, chemical cleaners or hard wire cleaning, because it will damage the surface of the machine, affect the service life, but also lead to safety risks.
3. When the machine is not in use for a long time, please clean it and put it in a ventilated and dry place, so as not to be affected by damp.
4. If the power cord is damaged, it must be replaced by professionals from the manufacturer, or the maintenance department, or similar departments in order to avoid danger.

#### After-sales service

Please read the instructions carefully before using the machine for the first time, it will help you to use and maintain the machine safely and correctly, so as to avoid unnecessary losses!

In accordance with the instructions clear under the condition of normal operation, if the product failure or quality problem, the company will provide warranty service for you, one year free warranty service, and over warranty period shall be paid for the service, work in pet hair dry machine failure (non-artificial damage) must be conducted by a professional repair shop or factory professional maintenance. If you have any comments or questions, please contact our after-sales service.

The following conditions are not covered by warranty or replacement:

1. You cannot fill in the correct product model, purchase address, purchase date and other information.
2. Product failure and damage caused by your failure to use in accordance with the instructions.
3. Product failure and damage caused by collision, fall and water inflow.
4. Product failure and damage caused by fire, earthquake, lightning strike, typhoon, flood and other natural disasters.
5. The warranty will terminate automatically if any damage is caused by self-repair without our company's permission.

After-sales warranty service card

(Please keep it properly.)

Name		Tel:	
Purchase place/store name		Model No.:	
Warranty or replacement reasons	Warranty reasons (replacement/repair)	Warranty date	
Detailed failure			

**Thank you for choosing our products**

**Manufacturer: Foshan Topone Electrical Appliances Co., Ltd**

**Address: Block 1 ,No. 5, 2nd Ring Road, Gaozan Village, XingTan Town, ShunDe District,  
Foshan City, Guangdong, China**

**National service number: 400-900-6233**